

### DLM single channel BUS

#### **Device Manual**









#### **FEATURES**

- BUS+FADER+DIMMER+DRIVER
- DC input 12-24-48 Vdc or 12-24 Vdc
- BUS Command:
  - DALI
  - DMX512+RDM
- MULTI INPUT Analogic Automatic Detection of the Local Command:
  - Normally Open Push button
  - 0-10V
  - 1-10V
  - Potentiometer 10KOhm
- PUSH MENU' Possibility to set:
  - Minimum value of dimming
  - Fade In
  - Fade Out
- Constant voltage variant to Common Anode applications
- Voltage outputs for R-L-C loads, DLM1248-1CV-DALI or DMX
- Voltage outputs for Resistive loads DLM1224-1CV DALI or DMX
- Memory function
- Adjusting the brightness of White light or monochromatic color
- · Adjusting the brightness up to completed off
- Soft start and soft stop
- · Optimized output curve
- Typical efficiency > 95%
- 100% Functional test –5 Years warranty

For the whole and update **Device Manual** refer to producer's website: <a href="http://www.dalcnet.com">http://www.dalcnet.com</a>

#### > CONSTANT VOLTAGE VARIANTS

Application: Dimmer

CODE	Input Voltage	Output	Channels	BUS Command	Analogic Auto Detection
DLM1248-1CV-DALI	12-48V DC	1 x 6,5A	1	DALI	N° 1 N.O. Push Button N° 1 analog signal 0-10V
DLM1224-1CV-DALI	12-24V DC	1 x 10A	1	DALI	N° 1 analog signal 1-10V N° 1 Potentiometer 10KOhm
DLM1248-1CV-DMX	12-48V DC	1 x 6,5A	1	DMX	N° 1 N.O. Push Button N° 1 analog signal 0-10V
DLM1224-1CV-DMX	12-24V DC	1 x 10A	1	DMX	N° 1 analog signal 1-10V N° 1 Potentiometer 10KOhm

The LED Dimmer is produced by default with:

- Analog Automatic Detection of local command set as N.O. Push Button
- Dimming minimum level at 1% (DALI variant), 0,1% (DMX variant)

#### PROTECTIONS

		DLM1248-1CV-DALI/DMX	DLM1224-1CV-DALI/DMX
ОТР	Over temperature protection <sup>1</sup>	✓	*
OVP	Over voltage protection <sup>2</sup>	✓	✓
UVP	Under voltage protection <sup>2</sup>	✓	✓
RVP	Reverse polarity protection <sup>2</sup>	✓	✓
IFP	Input fuse protection <sup>2</sup>	✓	✓
SCP	Short circuit protection	✓	×
ОСР	Open circuit protection	✓	<b>✓</b>
CLP	Current limit protection	<b>√</b>	×

<sup>&</sup>lt;sup>1</sup> Thermal Protection on the output channel in case of high temperature. The thermal intervention is detected by transistor (>150°C)

<sup>2</sup> Only control logic protection





#### > REFERENCE STANDARDS

EN 61347-1	Lamp controlgear - Part 1: General and safety requirements
EN 55015	Limits and methods of measurement of radio disturbance characteristics of electrical lighting and similar equipment
EN 61547	Equipment for general lighting purposes - EMC immunity requirements
IEC/EN 62386-101	Digital addressable lighting interface - Part 101: General requirements - System
IEC/EN 62386-102	Digital addressable lighting interface - Part 102: General requirements - Control gear
IEC/EN 62386-207	Digital addressable lighting interface - Part 207: Particular requirements for control gear – LED modules (device type 6)
IEC 60929-E.2.1	Control interface for controllable ballasts - control by d.c. voltage - functional specification
ANSI E 1.3	Entertainment Technology - Lighting Control Systems - 0 to 10V Analog Control Specification
ANSI E1.11	Entertainment Technology - USITT DMX512-A - Asynchronous Serial Digital Data Transmission Standard for Controlling
	Lighting Equipment and Accessories
ANSI E1.20	Entertainment Technology-RDM-Remote Device Management over USITT DMX512 Networks

#### > TECHNICAL SPECIFICATIONS

		DLM1248-1CV DALI	or DMX Variant	DLM1224-1CV DA	LI or DMX Variant
		Constant v	oltage	Constant	t voltage
Supply voltage		min: 10,8 Vdc max 52,8 Vdc		min: 10,8 Vdc max 26,4 Vdc	
Output voltage		= Vir	1	= \	/in
Input current		max 6,	5A	max 10A	
Output current <sup>3</sup>		6,5A @4	10°C	10A @40°C	
	@12V	78 W	I	120	) W
Absorbed nominal power <sup>3</sup>	@24V	156 V	V	240	) W
	@48V	312 V	V	-	-
Power loss in standby mode		<500m	ıW	<500	)mW
Type of Load		R – L –	- C	F	₹
Thermal shutdown <sup>4</sup>		150°(	С	-	
Command supply current		0,5mA (per 1-10V)		0,5mA (per 1-10V)	
Command required current (m	ax)	0,1mA (per 0-10V)		0,1mA (per 0-10V)	
D-PWM dimming frequency		300Hz		300Hz	
D-PWM resolution		16 bit		16 bit	
D-PWM range		0,1 – 100 %		0,1 – 100 %	
Storage temperature		min: -40 ma	nin: -40 max: +60° min: -40 max: +60°		max: +60°
Ambient temperature		min: -10 max: +40°		min: -10 r	max: +40°
Wiring		2.5mm <sup>2</sup> solid–2.5mm <sup>2</sup> stranded–30/12 AWG		1.5mm <sup>2</sup> solid–1mm <sup>2</sup> stranded–30/16 AWG	
Wire preparation length		5.5 – 6.5 mm		5 – 6 mm	
Protection grade		IP20		IP20	
Casing material		Plastic		Plastic	
Packaging unit (pieces/unit)		Single Carton Box 1pz	Carton box 21pz	Single Carton Box 1pz	Carton box 21pz
Mechanical dimensions		44 x 57 x 25 mm		44 x 57 x 19 mm	
Package dimensions	Package dimensions		263x178x82	56 x 68 x 35 mm	263x178x82
Weight		43g	1000g	37g	1000g

<sup>-</sup>

<sup>&</sup>lt;sup>3</sup> Maximum value, dependent on the ventilation conditions. This value is measured at 40°C, it is maximum ambient temperature.

<sup>&</sup>lt;sup>4</sup> The Temperature Protection, in case of high temperature, is detected by transistor (>150°) and is only on the output channel.






#### INSTALLATION

To set the product, follow the instruction on the picture below:

- 1) connect the LED in the output terminal blocks "OUT" of the device.
- 2) connect the LOCAL COMMAND to the terminal blocks "INPUT" and / or connect the BUS COMMAND to the terminal block "DALI or DMX" of the device.
- 3) connect the power supply (12-24 Vdc or 12-48 Vdc depending on the dimmer model) to terminal blocks "DC IN" of the device.

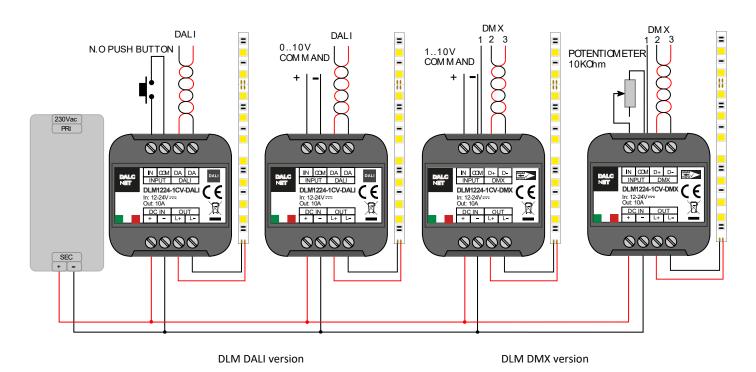

Examples of local commands and BUS command (DALI or DMX) connection.





#### MECHANICAL DIMENSION

# DLM1224-1CV-BUS Variant 57.2 57.2 50.5

#### TECHNICAL NOTE

#### Installation:

- Installation and maintenance must be performed only by qualified personnel in compliance with current regulations.
- The product must be installed inside an electrical panel protected against overvoltages.
- The product must be installed in a vertical or horizontal position with the cover / label upwards or vertically; Other positions are not permitted. It is not permitted to bottom-up position (with the cover / label down).
- Keep separated the circuits at 230V (LV) and the circuits not SELV from circuits to low voltage (SELV) and from any connection with this product. It is absolutely forbidden to connect, for any reason whatsoever, directly or indirectly, the 230V mains voltage to the bus or to otherparts of the circuit.

#### Power supply:

- For the power supply use only a SELV power supplies with limited current, short circuit protection and the power must be dimensioned correctly. In case of using power supply with ground terminals, all points of the protective earth (PE = Protection Earth) must be connected to a valid and certified protection earth.
- The connection cables between the power source "low voltage" and the product must be dimensioned correctly and they should be isolated from every
  wiring or parts at voltage not SELV. Use double insulated cables.
- Dimension the power supply for the load connected to the device. If the power supply is oversized compared with the maximum absorbed current, insert a protection against over-current between the power supply and the device.

#### Command:

- The length of the connection cables between the local commands (N.O. Push button, 0-10V, 1-10V, Potentiometer or other) and the product must be less than 10m; the cables must be dimensioned correctly and they should be isolated from every wiring or parts at voltage not SELV. Use double insulated shielded and twisted cables.
- The length and type of the connection cables at the BUS (DMX512, DALI or other) use cables as per specification of the respective protocols and
  regulations and they should be isolated from every wiring or parts at voltage not SELV. It is suggested to use double insulated shielded and twisted
  cables.
- All the product and the control signal connect at the bus (DMX512, DALI, Ethernet, or other) and at the local command (N.O. Push button, 0-10V, 1-10V, Potentiometer or other) must be SELV (the devices connected must be SELV or supply a SELV signal)

#### Outputs:

The length of the connection cables between the product and the LED module must be less than 10m; the cables must be dimensioned correctly and

they should be isolated from every wiring or parts at voltage not SELV. Is preferable to use shielded and twisted cables.





#### LOCAL COMMAND

#### ✓ PUSH DIMMER FEATURE

The intensity and the status change (ON/OFF) are controlled by the N.O. push button.

Button	Intensity
Click	On/Off
Double Click	Maximum intensity
Long pressure (>1s) from OFF	Turn ON at 1% (Nightly Time), then dimmer up/down
Long pressure (>1s) from ON	Dimmer up/down
15 Click in 5 second-time	Enter in to PUSH MENU'

#### √ 0-10V & 1-10V & POTENTIOMETER FEATURE

The intensity is controlled by input voltage variation

Input	Function	Intensity	
0-10V		Dimmer: 0-1V=0%	10V=100%
1-10V			
Potentiometer 10K			

#### **✓ ANALOGIC AUTOMATIC DETECTION**

**AUTOMATIC DETECTION OF THE TYPE OF LOCAL COMMAND** 








#### - AUTOMATIC DETECTION OF THE 0/1-10V & POTENTIOMETER COMMAND


The automatic recognition of analog signal 0/1-10V or potentiometer starts as soon as a 0/1-10V value between 3V and 7V is sent out or setting the potentiometer with value included from 30% and 70%.

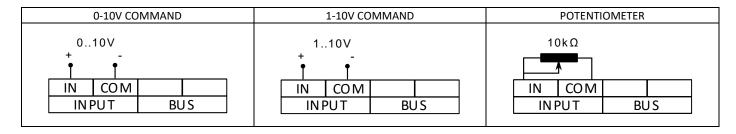

#### - AUTOMATIC DETECTION OF THE N.O. PUSH BUTTON COMMAND

The N.O. push button is identified automatically after 5 clicks in rapid sequence.

In mode N.O. push button, function memory is always active.

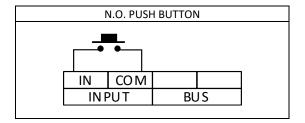





#### PUSH MENU'

#### **FUNCTIONS AVAILABLE**

- MINIMUM VALUE OF DIMMING
- POWER-ON RAMP (FADE IN)
- POWER-OFF RAMP (FADE OUT)



#### ACCESS TO MENU'

When you turn-on the LED dimmer, the output is set at 100% and the minimum of dimming is at 1% (DALI variant), 0,1% (DMX variant). To access the device menu, click the push button 15 times in 5 seconds-time.

When the Load flashes, you are in "MENU' 1"

#### ✓ MENU' 1 – MINIMUM VALUE OF DIMMING

Every single click make it changing the minimum value of dimming There are six levels of minimum: 0,1%, 1%, 5%, 10%, 20%, 30% e 100%

After setting the minimum value of dimming press long to confirm. A double flashing confirms the storage and you can go to "MENU' 2"

Note: if you set the minimum level to 100%, once the setting is confirmed, the device automatically exits the MENU'.

#### ✓ MENU' 2 – POWER-ON RAMP (FADE IN)

Every single click make it changing the power-on ramp There are five levels of power-on ramp (FADE IN): instantaneous, 1 second, 2 seconds, 3 seconds, 6 seconds.

After setting the FADE IN press a long to confirm.

Three flashes confirm the storage and you can go to "MENU' 3"

#### √ MENU' 3 – POWER-OFF RAMP (FADE OUT)

Every single click make it changing the power-off ramp There are five levels of power-off ramp (FADE OUT): Instantaneous, 1 second, 2 seconds, 3 seconds, 6 seconds.

After setting the FADE OUT press long to confirm.

Three quick flashes confirm the storage and you go out from the "DEVICE MENU"

When you are out of the Menu', the Lamp which is connected to the LED Dimmer turns on at the minimum level of dimming previously set.






#### DALI BUS SETUP

In **DALI BUS SETUP** all the leds are controlled by an external DALI controller.

#### **✓** BUS CONNECTION

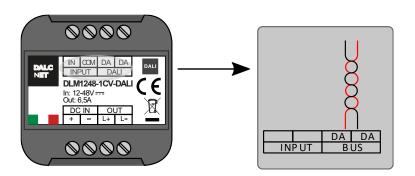

#### **√ FEATURES**

**BUS DALI** 

#### √ REFERENCE STANDARDS

IEC/EN 62386-101	Digital addressable lighting interface – Part 101: General requirements – System
IEC/EN 62386-102	Digital addressable lighting interface – Part 102: General requirements – Control gear

#### √ FUNCTIONS

#### **RELATION WITH LOCAL COMMANDS**

At first power-up, in case of absence of connection to the BUS, local control is active.

When the BUS is detected, the control passes to the BUS.

In the absence of signal the control passes to local commands in the event of the button pressure.

#### <u>ADDRESSING</u>

Simplified method (One ballast connected at time)	✓
Random Address Allocation	✓

#### ADDRESSES MAP

The intensity and the status (ON/OFF) is controlled by a DALI controller.

Address	Function	Value
0	Dimmer	Intensity [0254]





#### **COMMAND**

DIRECT ARC POWER  OFF  OFF  UP  DOWN  STEP UP  STEP DOWN  RECALL MAX LEVEL  RECALL MIN LEVEL  STEP DOWN AND OFF  ON AND STEP UP  GOTO SCENE (0 to 15)  RESET  STORE ACTUAL LEVEL IN THE DTR  STORE THE DTR AS MAX LEVEL  STORE THE DTR AS MIN LEVEL  STORE THE DTR AS SYSTEM FAILURE LEVEL  STORE THE DTR AS FADE TIME  STORE THE DTR AS FADE TIME  STORE THE DTR AS SCENE (0 to 15)  REMOVE FROM GROUP (0 to 15)  REMOVE FROM GROUP (0 to 15)  STORE DTR AS SHORT ADRESS  ENABLE WRITE MEMORY  QUERY STATUS  QUERY LAMP PAILURE  QUERY LAMP POWER ON  QUERY LAMP POWER ON  QUERY LIMIT ERROR  QUERY MISSING SHORT ADDRESS  QUERY MISSING SHORT ADDRESS  QUERY MISSING SHORT ADDRESS  QUERY LAMP POWER ON  QUERY LIMIT ERROR  QUERY MISSING SHORT ADDRESS  QUERY VERSION NUMBER  QUERY CONTENT DTR  QUERY DEVICE TYPE  QUERY DEVICE TYPE  QUERY ADDRESS H  QUERY STEM FAILURE  QUERY SYSTEM FAILURE  QUERY CONTENT DTR1  QUERY CONTENT DTR2  QUERY SYSTEM FAILURE  QUERY GROUPS 8-15  QUERY ADDRESS H  QUERY ADDRESS L  READ MEMORY LOCATION  *  **  **  **  **  **  **  **  **  *	STANDARD COMMAND	
OFF UP DOWN STEP UP STEP DOWN RECALL MAX LEVEL RECALL MIN LEVEL STEP DOWN AND OFF ON AND STEP UP GOTO SCENE (0 to 15) RESET STORE ACTUAL LEVEL IN THE DTR STORE THE DTR AS MAX LEVEL STORE THE DTR AS MIN LEVEL STORE THE DTR AS POWER ON LEVEL STORE THE DTR AS FADE TIME STORE THE DTR AS FADE TIME STORE THE DTR AS SCENE (0 to 15) REMOVE FROM SCENE (0 to 15) REMOVE FROM SCENE (0 to 15) REMOVE FROM GROUP (0 to 15) STORE DTR AS SHORT ADRESS ENABLE WRITE MEMORY QUERY STATUS QUERY BALLAST QUERY LAMP POWER ON QUERY LAMP POWER ON QUERY LIMIT ERROR QUERY LAMP POWER ON QUERY LIMIT ERROR QUERY MISSING SHORT ADDRESS QUERY VERSION NUMBER QUERY CONTENT DTR QUERY PHYSICAL MINIMUM LEVEL QUERY POWER FAILURE QUERY PHYSICAL MINIMUM LEVEL QUERY MAX LEVEL QUERY GROUPS 0-7 QUERY GROUPS 8-15 QUERY GROUPS 8-15 QUERY ADDRESS M QUERY ADDRESS M		<b>✓</b>
UP  DOWN  STEP UP  STEP DOWN  RECALL MAX LEVEL  RECALL MIN LEVEL  STEP DOWN AND OFF  ON AND STEP UP  GOTO SCENE (0 to 15)  RESET  STORE ACTUAL LEVEL IN THE DTR  STORE THE DTR AS MAX LEVEL  STORE THE DTR AS MIN LEVEL  STORE THE DTR AS POWER ON LEVEL  STORE THE DTR AS FADE TIME  STORE THE DTR AS FADE TIME  STORE THE DTR AS SCENE (0 to 15)  REMOVE FROM SCENE (0 to 15)  REMOVE FROM SCENE (0 to 15)  ADD TO GROUP (0 to 15)  STORE DTR AS SHORT ADRESS  ENABLE WRITE MEMORY  QUERY STATUS  QUERY LAMP PAILURE  QUERY LAMP POWER ON  QUERY LIMIT ERROR  QUERY MISSING SHORT ADDRESS  QUERY MISSING SHORT ADDRESS  QUERY VERSION NUMBER  QUERY CONTENT DTR  QUERY PHYSICAL MINIMUM LEVEL  QUERY PHYSICAL MINIMUM LEVEL  QUERY MAX LEVEL  QUERY GROUPS 8-15  QUERY GROUPS 8-15  QUERY ADDRESS H		<b>✓</b>
DOWN  STEP UP  STEP DOWN  RECALL MAX LEVEL  RECALL MIN LEVEL  STEP DOWN AND OFF  ON AND STEP UP  GOTO SCENE (0 to 15)  RESET  STORE ACTUAL LEVEL IN THE DTR  STORE THE DTR AS MAX LEVEL  STORE THE DTR AS MIN LEVEL  STORE THE DTR AS POWER ON LEVEL  STORE THE DTR AS FADE TIME  STORE THE DTR AS FADE TIME  STORE THE DTR AS FADE TIME  STORE THE DTR AS SCENE (0 to 15)  REMOVE FROM SCENE (0 to 15)  ADD TO GROUP (0 to 15)  STORE DTR AS SHORT ADRESS  ENABLE WRITE MEMORY  QUERY STATUS  QUERY LAMP POWER ON  QUERY LIMIT ERROR  QUERY MISSING SHORT ADDRESS  QUERY WESSION NUMBER  QUERY VERSION NUMBER  QUERY VERSION NUMBER  QUERY CONTENT DTR  QUERY DEVICE TYPE  GUERY MOLEY CONTENT DTR1  QUERY MIN LEVEL  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 0-7  QUERY GROUPS 0-7  QUERY GROUPS S-15  QUERY ADDRESS H		<b>✓</b>
STEP UP  STEP DOWN  RECALL MAX LEVEL  RECALL MIN LEVEL  STEP DOWN AND OFF  ON AND STEP UP  GOTO SCENE (0 to 15)  RESET  STORE ACTUAL LEVEL IN THE DTR  STORE ACTUAL LEVEL IN THE DTR  STORE THE DTR AS MAX LEVEL  STORE THE DTR AS MIN LEVEL  STORE THE DTR AS SYSTEM FAILURE LEVEL  STORE THE DTR AS FADE TIME  STORE THE DTR AS FADE TIME  STORE THE DTR AS FADE RATE  STORE THE DTR AS SCENE (0 to 15)  REMOVE FROM SCENE (0 to 15)  ADD TO GROUP (0 to 15)  STORE DTR AS SHORT ADRESS  ENABLE WRITE MEMORY  QUERY STATUS  QUERY LAMP FAILURE  QUERY LAMP POWER ON  QUERY LIMIT ERROR  QUERY LAMP POWER ON  QUERY WISSING SHORT ADDRESS  QUERY WISSING SHORT ADDRESS  QUERY WISSING SHORT ADDRESS  QUERY WISSING SHORT ADDRESS  QUERY VERSION NUMBER  QUERY CONTENT DTR  QUERY DEVICE TYPE  QUERY DEVICE TYPE  QUERY CONTENT DTR1  QUERY CONTENT DTR1  QUERY MIN LEVEL  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 0-7  QUERY ADDRESS M  QUERY ADDRESS L		<b>✓</b>
STEP DOWN  RECALL MAX LEVEL  RECALL MIN LEVEL  STEP DOWN AND OFF  ON AND STEP UP  GOTO SCENE (0 to 15)  RESET  STORE ACTUAL LEVEL IN THE DTR  STORE THE DTR AS MAX LEVEL  STORE THE DTR AS MIN LEVEL  STORE THE DTR AS SYSTEM FAILURE LEVEL  STORE THE DTR AS FADE TIME  STORE THE DTR AS FADE TIME  STORE THE DTR AS FADE TIME  STORE THE DTR AS SCENE (0 to 15)  REMOVE FROM SCENE (0 to 15)  REMOVE FROM GROUP (0 to 15)  STORE DTR AS SHORT ADRESS  ENABLE WRITE MEMORY  QUERY STATUS  QUERY BALLAST  QUERY LAMP FAILURE  QUERY LAMP FAILURE  QUERY MISSING SHORT ADDRESS  QUERY RESET STATE  QUERY MISSING SHORT ADDRESS  QUERY VERSION NUMBER  QUERY PHYSICAL MINIMUM LEVEL  QUERY DEVICE TYPE  QUERY ONTENT DTR  QUERY CONTENT DTR  QUERY SYSTEM FAILURE  QUERY SYSTEM FAILURE  QUERY SYSTEM FAILURE  QUERY SYSTEM FAILURE LEVEL  QUERY FADE TIME / FADE RATE  QUERY SYSTEM FAILURE LEVEL  QUERY GROUPS 0-7  QUERY GROUPS 8-15  QUERY ADDRESS M  QUERY ADDRESS M  QUERY ADDRESS L		<b>✓</b>
RECALL MAX LEVEL  RECALL MIN LEVEL  STEP DOWN AND OFF  ON AND STEP UP  GOTO SCENE (0 to 15)  RESET  STORE ACTUAL LEVEL IN THE DTR  STORE THE DTR AS MAX LEVEL  STORE THE DTR AS MIN LEVEL  STORE THE DTR AS SYSTEM FAILURE LEVEL  STORE THE DTR AS FADE TIME  STORE THE DTR AS FADE TIME  STORE THE DTR AS SCENE (0 to 15)  REMOVE FROM SCENE (0 to 15)  ADD TO GROUP (0 to 15)  REMOVE FROM GROUP (0 to 15)  STORE DTR AS SHORT ADRESS  ENABLE WRITE MEMORY  QUERY STATUS  QUERY BALLAST  QUERY LAMP POWER ON  QUERY LAMP POWER ON  QUERY LAMP FAILURE  QUERY MISSING SHORT ADDRESS  QUERY WESSION NUMBER  QUERY VERSION NUMBER  QUERY ONTENT DTR  QUERY POWER FAILURE  QUERY ONTENT DTR  QUERY CONTENT DTR  QUERY CONTENT DTR  QUERY CONTENT DTR  QUERY MIN LEVEL  QUERY MAX LEVEL  QUERY SSTEM FAILURE LEVEL  QUERY MIN LEVEL  QUERY SSTEM FAILURE LEVEL  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 0-7  QUERY ADDRESS M  QUERY ADDRESS M  QUERY ADDRESS L		
RECALL MIN LEVEL  STEP DOWN AND OFF  ON AND STEP UP  GOTO SCENE (0 to 15)  RESET  STORE ACTUAL LEVEL IN THE DTR  STORE THE DTR AS MAX LEVEL  STORE THE DTR AS MIN LEVEL  STORE THE DTR AS SYSTEM FAILURE LEVEL  STORE THE DTR AS FADE TIME  STORE THE DTR AS FADE TIME  STORE THE DTR AS FADE RATE  STORE THE DTR AS SCENE (0 to 15)  REMOVE FROM SCENE (0 to 15)  REMOVE FROM GROUP (0 to 15)  REMOVE FROM GROUP (0 to 15)  STORE DTR AS SHORT ADRESS  ENABLE WRITE MEMORY  QUERY STATUS  QUERY LAMP FAILURE  QUERY LAMP POWER ON  QUERY LIMIT ERROR  QUERY VERSION NUMBER  QUERY VERSION NUMBER  QUERY CONTENT DTR  QUERY CONTENT DTR  QUERY MOVENT TOTR  QUERY MOVENT TOTR  QUERY MOVENT TOTR  QUERY MAX LEVEL  QUERY MAX LEVEL  QUERY STATE  QUERY MAX LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 0-7  QUERY ADDRESS M  QUERY ADDRESS M  QUERY ADDRESS L		
STEP DOWN AND OFF ON AND STEP UP GOTO SCENE (0 to 15)  RESET  STORE ACTUAL LEVEL IN THE DTR  STORE THE DTR AS MAX LEVEL  STORE THE DTR AS MIN LEVEL  STORE THE DTR AS SYSTEM FAILURE LEVEL  STORE THE DTR AS POWER ON LEVEL  STORE THE DTR AS FADE TIME  STORE THE DTR AS FADE RATE  STORE THE DTR AS SCENE (0 to 15)  REMOVE FROM SCENE (0 to 15)  ADD TO GROUP (0 to 15)  REMOVE FROM GROUP (0 to 15)  STORE DTR AS SHORT ADRESS  ENABLE WRITE MEMORY  QUERY STATUS  QUERY BALLAST  QUERY LAMP FAILURE  QUERY LIMIT ERROR  QUERY MISSING SHORT ADDRESS  QUERY WRSSON NUMBER  QUERY VERSION NUMBER  QUERY DEVICE TYPE  QUERY POWER FAILURE  QUERY MONTENT DTR  QUERY MINSURE LEVEL  QUERY MAX LEVEL  QUERY MAX LEVEL  QUERY MAX LEVEL  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 8-15  QUERY ADDRESS M		
ON AND STEP UP  GOTO SCENE (0 to 15)  RESET  STORE ACTUAL LEVEL IN THE DTR  STORE THE DTR AS MAX LEVEL  STORE THE DTR AS MIN LEVEL  STORE THE DTR AS SYSTEM FAILURE LEVEL  STORE THE DTR AS POWER ON LEVEL  STORE THE DTR AS FADE TIME  STORE THE DTR AS FADE RATE  STORE THE DTR AS SCENE (0 to 15)  REMOVE FROM SCENE (0 to 15)  REMOVE FROM GROUP (0 to 15)  REMOVE FROM GROUP (0 to 15)  STORE DTR AS SHORT ADRESS  ENABLE WRITE MEMORY  QUERY STATUS  QUERY BALLAST  QUERY LAMP FAILURE  QUERY LAMP POWER ON  QUERY LIMIT ERROR  QUERY VERSION NUMBER  QUERY VERSION NUMBER  QUERY ONTENT DTR  QUERY POWER FAILURE  QUERY POWER FAILURE  QUERY POWER FAILURE  QUERY ONTENT DTR  QUERY MIN LEVEL  QUERY MAX LEVEL  QUERY MAX LEVEL  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 8-15  QUERY ADDRESS M		<b>✓</b>
GOTO SCENE (0 to 15)  RESET  STORE ACTUAL LEVEL IN THE DTR  STORE THE DTR AS MAX LEVEL  STORE THE DTR AS MIN LEVEL  STORE THE DTR AS SYSTEM FAILURE LEVEL  STORE THE DTR AS POWER ON LEVEL  STORE THE DTR AS FADE TIME  STORE THE DTR AS FADE RATE  STORE THE DTR AS SCENE (0 to 15)  REMOVE FROM SCENE (0 to 15)  REMOVE FROM GROUP (0 to 15)  REMOVE FROM GROUP (0 to 15)  STORE DTR AS SHORT ADRESS  ENABLE WRITE MEMORY  QUERY STATUS  QUERY BALLAST  QUERY LAMP FAILURE  QUERY LIMIT ERROR  QUERY LIMIT ERROR  QUERY VERSION NUMBER  QUERY VERSION NUMBER  QUERY DEVICE TYPE  QUERY DEVICE TYPE  QUERY ACTUAL LEVEL  QUERY MIN LEVEL  QUERY STATE IME / ADDRESS /		<b>✓</b>
RESET  STORE ACTUAL LEVEL IN THE DTR  STORE THE DTR AS MAX LEVEL  STORE THE DTR AS MIN LEVEL  STORE THE DTR AS SYSTEM FAILURE LEVEL  STORE THE DTR AS POWER ON LEVEL  STORE THE DTR AS FADE TIME  STORE THE DTR AS FADE TIME  STORE THE DTR AS SCENE (0 to 15)  REMOVE FROM SCENE (0 to 15)  REMOVE FROM GROUP (0 to 15)  REMOVE FROM GROUP (0 to 15)  STORE DTR AS SHORT ADRESS  ENABLE WRITE MEMORY  QUERY STATUS  QUERY BALLAST  QUERY LAMP FAILURE  QUERY LAMP POWER ON  QUERY LIMIT ERROR  QUERY MISSING SHORT ADDRESS  QUERY WESSION NUMBER  QUERY VERSION NUMBER  QUERY ONTENT DTR  QUERY CONTENT DTR  QUERY CONTENT DTR1  QUERY MAX LEVEL  QUERY MIN LEVEL  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 8-15  QUERY ADDRESS M  QUERY ADDRESS L		
STORE ACTUAL LEVEL IN THE DTR  STORE THE DTR AS MAX LEVEL  STORE THE DTR AS MIN LEVEL  STORE THE DTR AS SYSTEM FAILURE LEVEL  STORE THE DTR AS POWER ON LEVEL  STORE THE DTR AS FADE TIME  STORE THE DTR AS FADE RATE  STORE THE DTR AS SCENE (0 to 15)  REMOVE FROM SCENE (0 to 15)  ADD TO GROUP (0 to 15)  STORE DTR AS SHORT ADRESS  ENABLE WRITE MEMORY  QUERY STATUS  QUERY BALLAST  QUERY LAMP FAILURE  QUERY LAMP FOWER ON  QUERY LIMIT ERROR  QUERY MISSING SHORT ADDRESS  QUERY WRSSET STATE  QUERY WRSSING SHORT ADDRESS  QUERY VERSION NUMBER  QUERY CONTENT DTR  QUERY DEVICE TYPE  QUERY POWER FAILURE  QUERY CONTENT DTR1  QUERY CONTENT DTR2  QUERY MAX LEVEL  QUERY MAX LEVEL  QUERY MAX LEVEL  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 0-7  QUERY ADDRESS M	· · ·	
STORE THE DTR AS MAX LEVEL  STORE THE DTR AS MIN LEVEL  STORE THE DTR AS SYSTEM FAILURE LEVEL  STORE THE DTR AS POWER ON LEVEL  STORE THE DTR AS FADE TIME  STORE THE DTR AS FADE RATE  STORE THE DTR AS SCENE (0 to 15)  REMOVE FROM SCENE (0 to 15)  ADD TO GROUP (0 to 15)  STORE DTR AS SHORT ADRESS  ENABLE WRITE MEMORY  QUERY STATUS  QUERY BALLAST  QUERY LAMP FAILURE  QUERY LAMP FOWER ON  QUERY LIMIT ERROR  QUERY MISSING SHORT ADDRESS  QUERY WRSSET STATE  QUERY WRSSING SHORT ADDRESS  QUERY VERSION NUMBER  QUERY CONTENT DTR  QUERY DEVICE TYPE  QUERY POWER FAILURE  QUERY CONTENT DTR1  QUERY CONTENT DTR1  QUERY CONTENT DTR2  QUERY MIN LEVEL  QUERY MIN LEVEL  QUERY MIN LEVEL  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 0-7  QUERY ADDRESS M		
STORE THE DTR AS MIN LEVEL  STORE THE DTR AS SYSTEM FAILURE LEVEL  STORE THE DTR AS POWER ON LEVEL  STORE THE DTR AS FADE TIME  STORE THE DTR AS FADE RATE  STORE THE DTR AS SCENE (0 to 15)  REMOVE FROM SCENE (0 to 15)  ADD TO GROUP (0 to 15)  REMOVE FROM GROUP (0 to 15)  STORE DTR AS SHORT ADRESS  ENABLE WRITE MEMORY  QUERY STATUS  QUERY BALLAST  QUERY LAMP FAILURE  QUERY LIMIT ERROR  QUERY LIMIT ERROR  QUERY MISSING SHORT ADDRESS  QUERY WESSION NUMBER  QUERY VERSION NUMBER  QUERY DEVICE TYPE  QUERY PHYSICAL MINIMUM LEVEL  QUERY MOVER TORLY  QUERY MIN LEVEL  QUERY MIN LEVEL  QUERY MIN LEVEL  QUERY MIN LEVEL  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 8-15  QUERY ADDRESS M		· /
STORE THE DTR AS SYSTEM FAILURE LEVEL  STORE THE DTR AS POWER ON LEVEL  STORE THE DTR AS POWER ON LEVEL  STORE THE DTR AS FADE TIME  STORE THE DTR AS FADE RATE  STORE THE DTR AS SCENE (0 to 15)  REMOVE FROM SCENE (0 to 15)  ADD TO GROUP (0 to 15)  REMOVE FROM GROUP (0 to 15)  STORE DTR AS SHORT ADRESS  ENABLE WRITE MEMORY  QUERY STATUS  QUERY BALLAST  QUERY LAMP FAILURE  QUERY LAMP POWER ON  QUERY LIMIT ERROR  QUERY MISSING SHORT ADDRESS  QUERY VERSION NUMBER  QUERY VERSION NUMBER  QUERY DEVICE TYPE  QUERY CONTENT DTR  QUERY CONTENT DTR1  QUERY CONTENT DTR1  QUERY ACTUAL LEVEL  QUERY MIN LEVEL  QUERY MIN LEVEL  QUERY MIN LEVEL  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 8-15  QUERY ADDRESS M		· /
STORE THE DTR AS POWER ON LEVEL  STORE THE DTR AS PADE TIME  STORE THE DTR AS FADE TIME  STORE THE DTR AS FADE RATE  STORE THE DTR AS SCENE (0 to 15)  REMOVE FROM SCENE (0 to 15)  ADD TO GROUP (0 to 15)  REMOVE FROM GROUP (0 to 15)  REMOVE FROM GROUP (0 to 15)  STORE DTR AS SHORT ADRESS  ENABLE WRITE MEMORY  QUERY STATUS  QUERY BALLAST  QUERY LAMP FAILURE  QUERY LIMIT ERROR  QUERY LIMIT ERROR  QUERY MISSING SHORT ADDRESS  QUERY WRESET STATE  QUERY VERSION NUMBER  QUERY CONTENT DTR  QUERY DEVICE TYPE  QUERY POWER FAILURE  QUERY CONTENT DTR1  QUERY CONTENT DTR1  QUERY ACTUAL LEVEL  QUERY MIN LEVEL  QUERY MIN LEVEL  QUERY MAX LEVEL  QUERY STADE TIME / FADE RATE  QUERY GROUPS 0-7  QUERY GROUPS 8-15  QUERY ADDRESS M		
STORE THE DTR AS FADE TIME  STORE THE DTR AS FADE RATE  STORE THE DTR AS SCENE (0 to 15)  REMOVE FROM SCENE (0 to 15)  ADD TO GROUP (0 to 15)  REMOVE FROM GROUP (0 to 15)  REMOVE FROM GROUP (0 to 15)  STORE DTR AS SHORT ADRESS  ENABLE WRITE MEMORY  QUERY STATUS  QUERY BALLAST  QUERY LAMP FAILURE  QUERY LIMIT ERROR  QUERY MISSING SHORT ADDRESS  QUERY WRSSION NUMBER  QUERY VERSION NUMBER  QUERY CONTENT DTR  QUERY PHYSICAL MINIMUM LEVEL  QUERY POWER FAILURE  QUERY CONTENT DTR1  QUERY ACTUAL LEVEL  QUERY MIN LEVEL  QUERY MIN LEVEL  QUERY STADE AND		
STORE THE DTR AS FADE RATE  STORE THE DTR AS SCENE (0 to 15)  REMOVE FROM SCENE (0 to 15)  ADD TO GROUP (0 to 15)  REMOVE FROM GROUP (0 to 15)  STORE DTR AS SHORT ADRESS  ENABLE WRITE MEMORY  QUERY STATUS  QUERY BALLAST  QUERY LAMP FAILURE  QUERY LAMP POWER ON  QUERY LIMIT ERROR  QUERY MISSING SHORT ADDRESS  QUERY VERSION NUMBER  QUERY VERSION NUMBER  QUERY DEVICE TYPE  QUERY PHYSICAL MINIMUM LEVEL  QUERY CONTENT DTR  QUERY ACTUAL LEVEL  QUERY MAX LEVEL  QUERY MAX LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY STADE TIME / FADE RATE  QUERY GROUPS 8-15  QUERY GROUPS 8-15  QUERY ADDRESS M  QUERY ADDRESS M  QUERY ADDRESS M		
STORE THE DTR AS SCENE (0 to 15)  REMOVE FROM SCENE (0 to 15)  ADD TO GROUP (0 to 15)  REMOVE FROM GROUP (0 to 15)  STORE DTR AS SHORT ADRESS  ENABLE WRITE MEMORY  QUERY STATUS  QUERY BALLAST  QUERY LAMP FAILURE  QUERY LAMP POWER ON  QUERY LIMIT ERROR  QUERY MISSING SHORT ADDRESS  QUERY VERSION NUMBER  QUERY VERSION NUMBER  QUERY DEVICE TYPE  QUERY PHYSICAL MINIMUM LEVEL  QUERY CONTENT DTR  QUERY CONTENT DTR  QUERY CONTENT DTR2  QUERY MAX LEVEL  QUERY MAX LEVEL  QUERY MIN LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 8-15  QUERY ADDRESS M		
REMOVE FROM SCENE (0 to 15)  ADD TO GROUP (0 to 15)  REMOVE FROM GROUP (0 to 15)  STORE DTR AS SHORT ADRESS  ENABLE WRITE MEMORY  QUERY STATUS  QUERY BALLAST  QUERY LAMP FAILURE  QUERY LIMIT ERROR  QUERY LIMIT ERROR  QUERY MISSING SHORT ADDRESS  QUERY VERSION NUMBER  QUERY VERSION NUMBER  QUERY DEVICE TYPE  QUERY PHYSICAL MINIMUM LEVEL  QUERY CONTENT DTR  QUERY CONTENT DTR1  QUERY CONTENT DTR2  QUERY MAX LEVEL  QUERY MIN LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 8-15  QUERY ADDRESS M		
ADD TO GROUP (0 to 15)  REMOVE FROM GROUP (0 to 15)  STORE DTR AS SHORT ADRESS  ENABLE WRITE MEMORY  QUERY STATUS  QUERY BALLAST  QUERY LAMP FAILURE  QUERY LIMIT ERROR  QUERY LIMIT ERROR  QUERY MISSING SHORT ADDRESS  QUERY VERSION NUMBER  QUERY VERSION NUMBER  QUERY DEVICE TYPE  QUERY PHYSICAL MINIMUM LEVEL  QUERY CONTENT DTR  QUERY CONTENT DTR1  QUERY CONTENT DTR2  QUERY MIN LEVEL  QUERY MIN LEVEL  QUERY MIN LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 8-15  QUERY ADDRESS M	` '	
REMOVE FROM GROUP (0 to 15)  STORE DTR AS SHORT ADRESS  ENABLE WRITE MEMORY  QUERY STATUS  QUERY BALLAST  QUERY LAMP FAILURE  QUERY LIMIT ERROR  QUERY HIMIT ERROR  QUERY MISSING SHORT ADDRESS  QUERY VERSION NUMBER  QUERY CONTENT DTR  QUERY DEVICE TYPE  QUERY PHYSICAL MINIMUM LEVEL  QUERY CONTENT DTR1  QUERY CONTENT DTR2  QUERY ACTUAL LEVEL  QUERY MIN LEVEL  QUERY MIN LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY GROUPS 0-7  QUERY GROUPS 8-15  QUERY ADDRESS M  QUERY ADDRESS L	` ,	
STORE DTR AS SHORT ADRESS  ENABLE WRITE MEMORY  QUERY STATUS  QUERY BALLAST  QUERY LAMP FAILURE  S QUERY LIMIT ERROR  QUERY MISSING SHORT ADDRESS  QUERY VERSION NUMBER  QUERY DEVICE TYPE  QUERY PHYSICAL MINIMUM LEVEL  QUERY CONTENT DTR  QUERY CONTENT DTR1  QUERY ACTUAL LEVEL  QUERY MAX LEVEL  QUERY MIN LEVEL  QUERY MIN LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY STEM FAILURE LEVEL  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 0-7  QUERY GROUPS 8-15  QUERY ADDRESS H  QUERY ADDRESS M  QUERY ADDRESS L	·	
ENABLE WRITE MEMORY  QUERY STATUS  QUERY BALLAST  QUERY LAMP FAILURE  QUERY LAMP POWER ON  QUERY LIMIT ERROR  QUERY MISSING SHORT ADDRESS  QUERY VERSION NUMBER  QUERY ONTENT DTR  QUERY PHYSICAL MINIMUM LEVEL  QUERY CONTENT DTR  QUERY CONTENT DTR2  QUERY ACTUAL LEVEL  QUERY MAX LEVEL  QUERY MIN LEVEL  QUERY MIN LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY STEM FAILURE LEVEL  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 8-15  QUERY ADDRESS H  QUERY ADDRESS M  QUERY ADDRESS M  QUERY ADDRESS L		
QUERY STATUS  QUERY BALLAST  QUERY LAMP FAILURE  QUERY LAMP POWER ON  QUERY LIMIT ERROR  QUERY MISSING SHORT ADDRESS  QUERY VERSION NUMBER  QUERY CONTENT DTR  QUERY PHYSICAL MINIMUM LEVEL  QUERY POWER FAILURE  QUERY CONTENT DTR  QUERY CONTENT DTR  QUERY CONTENT DTR  QUERY POWER FAILURE  QUERY CONTENT DTR  QUERY CONTENT DTR  QUERY CONTENT DTR  QUERY ACTUAL LEVEL  QUERY MAX LEVEL  QUERY MIN LEVEL  QUERY MIN LEVEL  QUERY FADE TIME / FADE RATE  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 8-15  QUERY ADDRESS H  QUERY ADDRESS M  V  QUERY ADDRESS M  QUERY ADDRESS L		
QUERY BALLAST QUERY LAMP FAILURE  QUERY LAMP POWER ON  QUERY LIMIT ERROR QUERY RESET STATE QUERY MISSING SHORT ADDRESS QUERY VERSION NUMBER QUERY CONTENT DTR QUERY DEVICE TYPE QUERY PHYSICAL MINIMUM LEVEL QUERY POWER FAILURE QUERY CONTENT DTR1 QUERY CONTENT DTR2 QUERY ACTUAL LEVEL QUERY MAX LEVEL QUERY MIN LEVEL QUERY MIN LEVEL QUERY SYSTEM FAILURE LEVEL QUERY SYSTEM FAILURE LEVEL QUERY SCENE LEVEL (0 to 15) QUERY GROUPS 8-15 QUERY ADDRESS H QUERY ADDRESS M  V  QUERY ADDRESS M  V  QUERY ADDRESS L		
QUERY LAMP FAILURE  QUERY LAMP POWER ON  QUERY LIMIT ERROR  QUERY MISSING SHORT ADDRESS  QUERY VERSION NUMBER  QUERY CONTENT DTR  QUERY DEVICE TYPE  QUERY PHYSICAL MINIMUM LEVEL  QUERY POWER FAILURE  QUERY CONTENT DTR1  QUERY CONTENT DTR2  QUERY ACTUAL LEVEL  QUERY MAX LEVEL  QUERY MIN LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY SCONE LEVEL (0 to 15)  QUERY GROUPS 8-15  QUERY ADDRESS H  QUERY ADDRESS M  V  QUERY ADDRESS L		
QUERY LAMP POWER ON  QUERY LIMIT ERROR  QUERY RESET STATE  QUERY MISSING SHORT ADDRESS  QUERY VERSION NUMBER  QUERY CONTENT DTR  QUERY DEVICE TYPE  GUERY PHYSICAL MINIMUM LEVEL  QUERY CONTENT DTR1  QUERY CONTENT DTR1  QUERY CONTENT DTR2  QUERY ACTUAL LEVEL  QUERY MAX LEVEL  QUERY MIN LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 8-15  QUERY ADDRESS H  QUERY ADDRESS M  QUERY ADDRESS L		·
QUERY LIMIT ERROR  QUERY RESET STATE  QUERY MISSING SHORT ADDRESS  QUERY VERSION NUMBER  QUERY DEVICE TYPE  QUERY PHYSICAL MINIMUM LEVEL  QUERY POWER FAILURE  QUERY CONTENT DTR1  QUERY CONTENT DTR2  QUERY ACTUAL LEVEL  QUERY MAX LEVEL  QUERY MIN LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY FADE TIME / FADE RATE  QUERY GROUPS 0-7  QUERY GROUPS 8-15  QUERY ADDRESS H  QUERY ADDRESS M  V  QUERY ADDRESS L		
QUERY RESET STATE  QUERY MISSING SHORT ADDRESS  QUERY VERSION NUMBER  QUERY DEVICE TYPE  QUERY PHYSICAL MINIMUM LEVEL  QUERY CONTENT DTR1  QUERY CONTENT DTR1  QUERY CONTENT DTR2  QUERY ACTUAL LEVEL  QUERY MAX LEVEL  QUERY MIN LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY FADE TIME / FADE RATE  QUERY GROUPS 0-7  QUERY GROUPS 8-15  QUERY ADDRESS H  QUERY ADDRESS M  QUERY ADDRESS L	-	
QUERY MISSING SHORT ADDRESS  QUERY VERSION NUMBER  QUERY CONTENT DTR  QUERY DEVICE TYPE  GUERY PHYSICAL MINIMUM LEVEL  QUERY POWER FAILURE  QUERY CONTENT DTR1  QUERY CONTENT DTR2  QUERY ACTUAL LEVEL  QUERY MAX LEVEL  QUERY MIN LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY FADE TIME / FADE RATE  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 8-15  QUERY ADDRESS H  QUERY ADDRESS M  QUERY ADDRESS L		
QUERY VERSION NUMBER  QUERY CONTENT DTR  QUERY DEVICE TYPE  GUERY PHYSICAL MINIMUM LEVEL  QUERY POWER FAILURE  QUERY CONTENT DTR1  QUERY CONTENT DTR2  QUERY ACTUAL LEVEL  QUERY MAX LEVEL  QUERY MIN LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY FADE TIME / FADE RATE  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 0-7  QUERY ADDRESS H  QUERY ADDRESS M  QUERY ADDRESS L	-	
QUERY CONTENT DTR  QUERY DEVICE TYPE  G QUERY PHYSICAL MINIMUM LEVEL  QUERY POWER FAILURE  QUERY CONTENT DTR1  QUERY CONTENT DTR2  QUERY ACTUAL LEVEL  QUERY MAX LEVEL  QUERY MIN LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY FADE TIME / FADE RATE  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 0-7  QUERY ADDRESS H  QUERY ADDRESS M  QUERY ADDRESS L		<b>V</b>
QUERY CONTENT DTR  QUERY DEVICE TYPE  QUERY PHYSICAL MINIMUM LEVEL  QUERY POWER FAILURE  QUERY CONTENT DTR1  QUERY CONTENT DTR2  QUERY ACTUAL LEVEL  QUERY MAX LEVEL  QUERY MIN LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY FADE TIME / FADE RATE  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 0-7  QUERY ADDRESS H  QUERY ADDRESS M  QUERY ADDRESS L		<b>V</b>
QUERY PHYSICAL MINIMUM LEVEL  QUERY POWER FAILURE  QUERY CONTENT DTR1  QUERY CONTENT DTR2  QUERY ACTUAL LEVEL  QUERY MAX LEVEL  QUERY MIN LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY FADE TIME / FADE RATE  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 0-7  QUERY GROUPS 8-15  QUERY ADDRESS H  QUERY ADDRESS M  QUERY ADDRESS L	-	
QUERY POWER FAILURE  QUERY CONTENT DTR1  QUERY CONTENT DTR2  QUERY ACTUAL LEVEL  QUERY MAX LEVEL  QUERY MIN LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY FADE TIME / FADE RATE  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 0-7  QUERY GROUPS 8-15  QUERY ADDRESS H  QUERY ADDRESS M  QUERY ADDRESS L		6
QUERY CONTENT DTR1  QUERY CONTENT DTR2  QUERY ACTUAL LEVEL  QUERY MAX LEVEL  QUERY MIN LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY FADE TIME / FADE RATE  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 0-7  QUERY GROUPS 8-15  QUERY ADDRESS H  QUERY ADDRESS M  QUERY ADDRESS L	No. 1	<b>V</b>
QUERY CONTENT DTR2  QUERY ACTUAL LEVEL  QUERY MAX LEVEL  QUERY MIN LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY FADE TIME / FADE RATE  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 0-7  QUERY GROUPS 8-15  QUERY ADDRESS H  QUERY ADDRESS M  QUERY ADDRESS L		<b>*</b>
QUERY ACTUAL LEVEL  QUERY MAX LEVEL  QUERY MIN LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY FADE TIME / FADE RATE  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 0-7  QUERY GROUPS 8-15  QUERY ADDRESS H  QUERY ADDRESS M  QUERY ADDRESS L		<b>V</b>
QUERY MAX LEVEL  QUERY MIN LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY FADE TIME / FADE RATE  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 0-7  QUERY GROUPS 8-15  QUERY ADDRESS H  QUERY ADDRESS M  QUERY ADDRESS L		<b>V</b>
QUERY MIN LEVEL  QUERY SYSTEM FAILURE LEVEL  QUERY FADE TIME / FADE RATE  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 0-7  QUERY GROUPS 8-15  QUERY ADDRESS H  QUERY ADDRESS M  QUERY ADDRESS L		
QUERY SYSTEM FAILURE LEVEL  QUERY FADE TIME / FADE RATE  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 0-7  QUERY GROUPS 8-15  QUERY ADDRESS H  QUERY ADDRESS M  QUERY ADDRESS L		
QUERY FADE TIME / FADE RATE  QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 0-7  QUERY GROUPS 8-15  QUERY ADDRESS H  QUERY ADDRESS M  QUERY ADDRESS L		
QUERY SCENE LEVEL (0 to 15)  QUERY GROUPS 0-7  QUERY GROUPS 8-15  QUERY ADDRESS H  QUERY ADDRESS M  QUERY ADDRESS L	QUERY SYSTEM FAILURE LEVEL	
QUERY GROUPS 0-7  QUERY GROUPS 8-15  QUERY ADDRESS H  QUERY ADDRESS M  QUERY ADDRESS L	•	
QUERY ADDRESS H  QUERY ADDRESS M  QUERY ADDRESS L  X	,	
QUERY ADDRESS H  QUERY ADDRESS M  QUERY ADDRESS L  ×	QUERY GROUPS 0-7	
QUERY ADDRESS M  QUERY ADDRESS L  ×	QUERY GROUPS 8-15	
QUERY ADDRESS L *	QUERY ADDRESS H	✓
QUENT ADDINESS E	QUERY ADDRESS M	✓
READ MEMORY LOCATION *	QUERY ADDRESS L	×
	READ MEMORY LOCATION	×

SPECIAL COMMAND	
TERMINATE	✓
DATA TRANSFERT REGISTER	✓
INITIALIZE	✓
RANDOMIZE	✓
COMPARE	✓
WITHDRAW	✓
SEARCHADOR H	✓
SEARCHADOR M	✓
SEARCHADOR L	<b>✓</b>
PROGRAM SHORT ADDRESS	<b>√</b>
VERIFY SHORT ADDRESS	<b>√</b>
QUERY SHORT ADDRESS	<b>√</b>
	×
PHYSICAL SELECTION	×
ENABLE DEVICE TYPE	
DATA TRANSFER REGISTER 1	· ·
DATA TRANSFER REGISTER 2	
WRITE MEMORY LOCATION	×
_	

<sup>&</sup>lt;sup>5</sup> Lamp failure returns always No.

<sup>&</sup>lt;sup>6</sup> "Query device type" returns DT6 but "Enable device type" is not enable.





#### **DEFAULT VALUE**

	FACTORY	RESET
ACTUAL LEVEL	254	254
POWER ON LEVEL	254	254
SYSTEM FAILURE LEVEL	254	254
MIN LEVEL	1	1
MAX LEVEL	254	254
FADE RATE	7	7
FADE TIME	0	0
SHORT ADDRESS	FF	(no change)
SEARCH ADDRESS	FF FF FF	FF FF FF
RANDOM ADDRESS	FF FF FF	FF FF FF
GROUP 0-7	0	0
GROUP 8-15	0	0
SCENE 0-15	MASK	MASK
STATUS INFORMATION	1??0????	0?100???
VERSION NUMBER	1	(no change)
PHYSICAL MIN. LEVEL	1	(no change)






#### DMX512+RDM BUS SETUP

With the  ${\it DMX+RDM~BUS~SETUP}$  in the "slave" condition the outputs are managed by an external DMX controller.

#### **✓** BUS CONNECTION

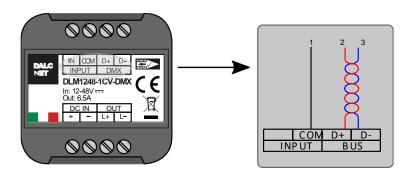

#### √ FEATURES

BUS DMX512 (NSC+RDM)

#### √ REFERENCE STANDARDS

ANSI E1.11	Entertainment Technology – USITT DMX512-A – Asynchronous Serial Digital Data Transmission Standard for
	Controlling Lighting Equipment and Accessories
ANSI E1.20	Entertainment Technology-RDM-Remote Device Management over USITT DMX512 Networks

#### **√** FUNCTION

#### RELATION WITH LOCAL COMMANDS

At first power-up, in case of absence of connection to the BUS, local control is active.

When the BUS is detected, the control passes to the BUS.

In the absence of signal the control passes to local commands in the event of the button pressure.

#### <u>ADDRESSING</u>



Notice: device addressing have to be carried out by a DMX-RDM programmer.

#### **CHANNEL MAPS**

The intensity and the status (ON/OFF) is controlled by a DMX controller.

Channel	Function	Value
1	Dimmer	Intensity [0255]





#### **RDM COMMAND**

REQUESTED PARAMETERS	
DISC_UNIQUE_BRANCH	✓
DISC_UN_MUTE	✓
SUPPORTED_PARAMETERS	✓
PARAMETERS_DESCRIPTION	✓
DEVICE_INFO	✓
SOFTWARE_VERSION_LABEL	✓
DMX_START_ADDRESS	✓
IDENTIFY_DEVICE	✓

SUPPORTED PARAMETERS		
PRODUCT_DETAIL_ID_LIST	<b>√</b>	
DEVICE_MODEL_DESCRIPTION	<b>√</b>	
MANUFACTURER_LABEL	<b>√</b>	
DEVIDE_LABEL	<b>√</b>	
BOOT_SOFTWARE_VERSION_ID	<b>√</b>	
BOOT_SOFTWARE_VERSION_LABEL	<b>√</b>	
DMX_PERSONALITY	<b>√</b>	
DMX_PERSONALITY_DESCRIPTION	<b>√</b>	
SLOT_INFO	<b>✓</b>	
SLOT_DESCRIPTION	<b>√</b>	
DEFAULT_SLOT_VALUE	<b>√</b>	